




# Cuisinart DLC-10S Pro Classic 7-Cup Food Processor Power Cord Replacement

This guide will explain how to replace the power cord.

Written By: Reagan Burns

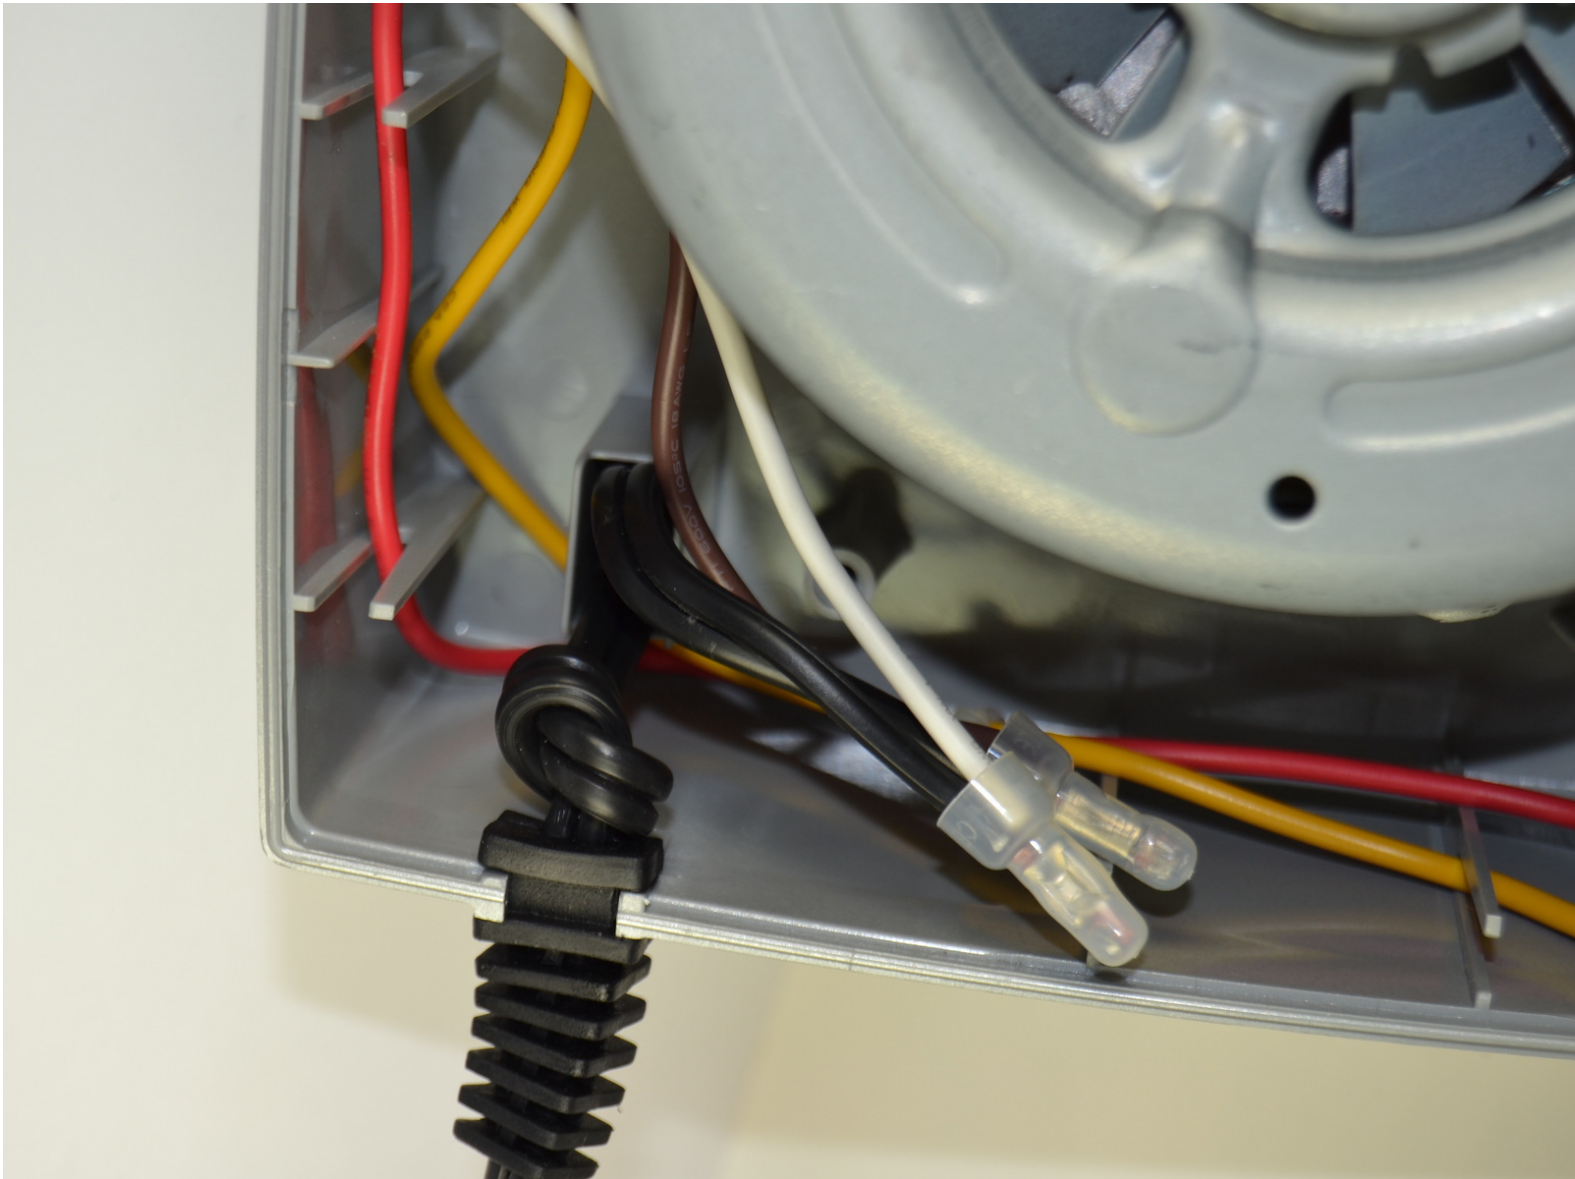




## TOOLS:

- [Soldering Station](#) (1)
  - [Solder](#) (1)
  - [Wire Stripper](#) (1)
  - [Screwdriver](#) (1)
  - [Flush Wire Cutters](#) (1)
-

## Step 1 — Power Cord

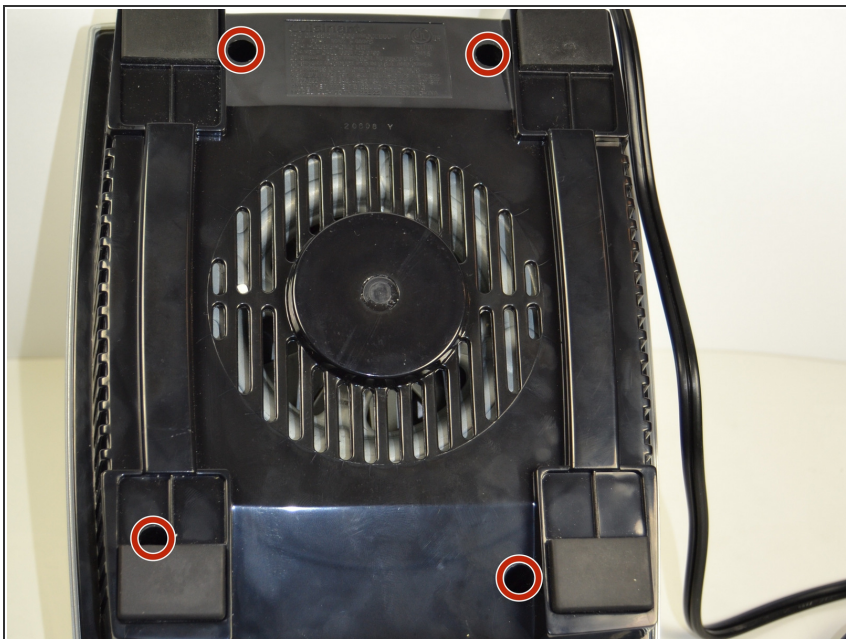


- Use a screwdriver to remove the four screws that are next to the grip pads on the bottom of the motor base.

## Step 2




- Remove the black plastic covering from the motor base.

### Step 3

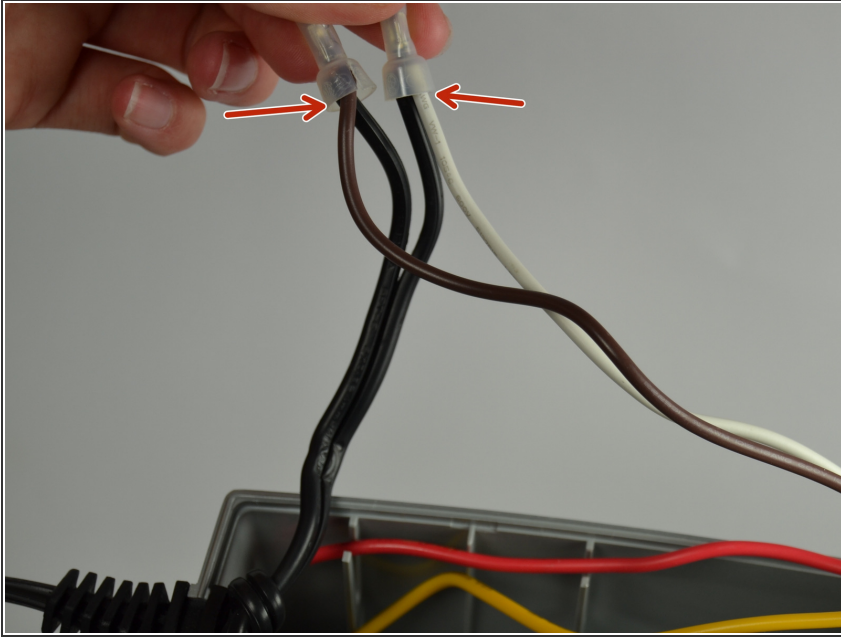

- Locate the connections between the power cord and the brown and white wires. Cut off these connections.


### Step 4

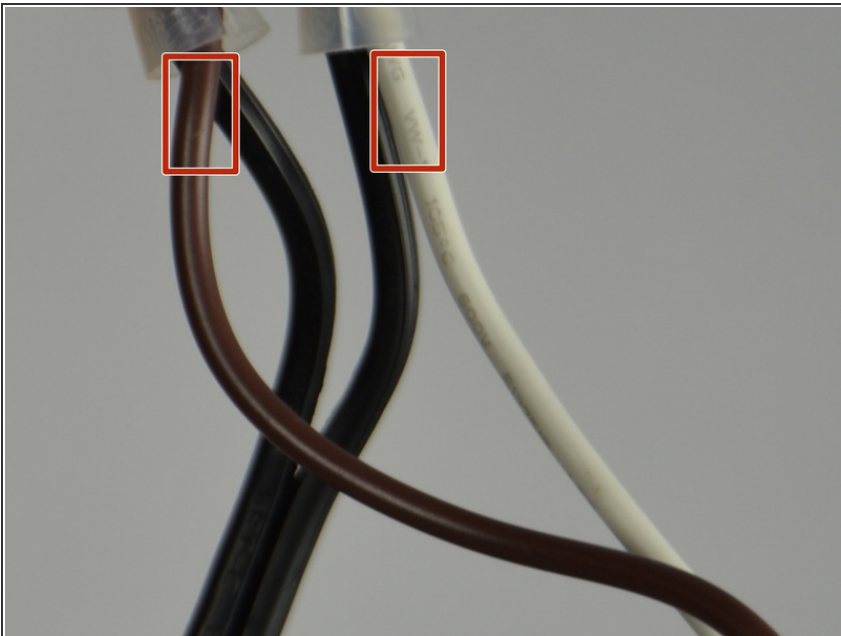

- Strip the plastic coating off the edge of the brown and white wires using a wire stripper.




## Step 5

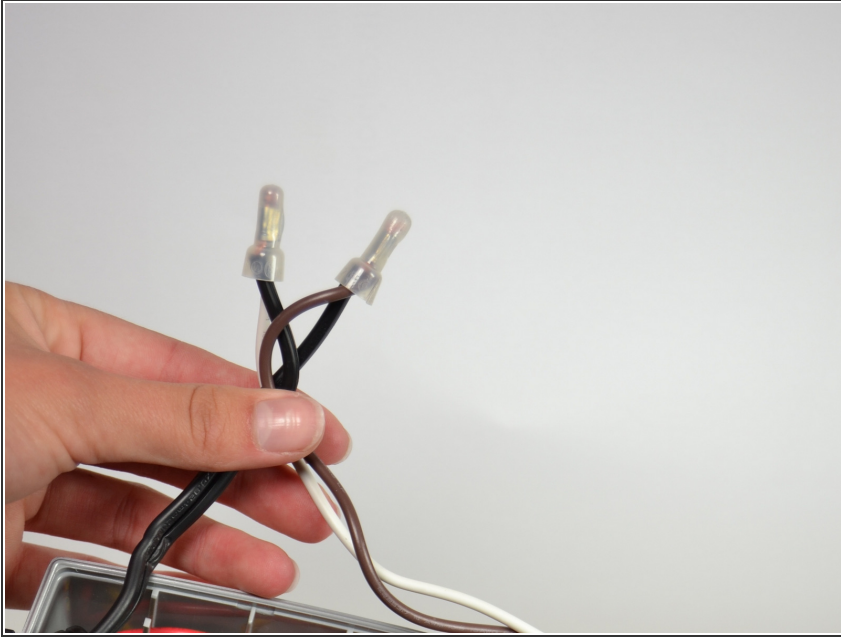

- Create a connection between the brown and white wires and the wires of the new power cord by [soldering](#) them together.

## Step 6

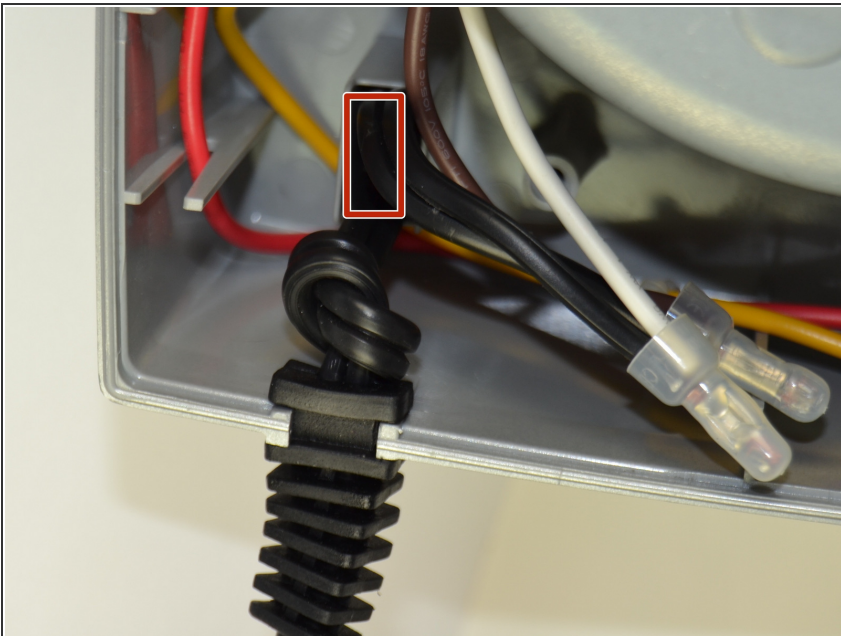

- Fit the wires back into the motor base and place the new power cord in the slot.

By the end of this guide< you will have successfully replaced the power cord to your device.